



- 1
 - ▶ Remove the aluminium outer bag taking care not to damage the clear inner bag.
 - ▶ Immediately use the resin after opening the aluminium outer bag.

Attention:


- ▶ Do not mix different types or brands of resins.
- ▶ Take steps to prevent damage as a result of spilling resin.
- ▶ Wear disposable gloves and process only in a well ventilated room.



- 2
 - ▶ Remove the separator from the centre of the bag.



- 3
 - ▶ **Mix contents by kneading vigorously for at least two minutes.**
 - ▶ Make certain all the resin compound is squeezed from the corners and edges of the bag.

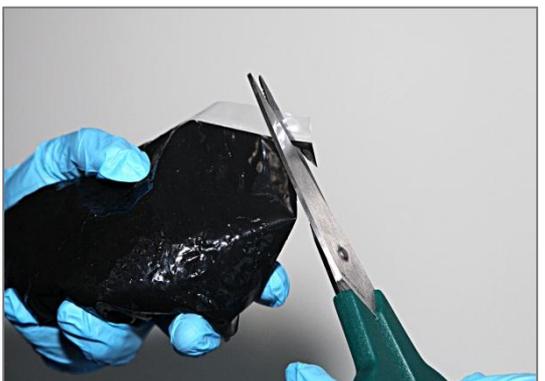

- 4 **Pouring of the resin:**
 - ▶ Cut a small edge from the bag.
 - ▶ Carefully pour the resin into the joint shell.
 - ▶ Empty (hardened) resin packs can be disposed as regular waste material.